

Переключатели джойстика КС

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: eai@nt-rt.ru || сайт: <https://euchner.nt-rt.ru/>

JOYSTICK SWITCHES KC



Description

Multifunctional control unit, designed for use in machine tools. 1 to 8 actuating directions with up to 3 switching elements per direction – momentary-contact, latching or combined. 1 to 3 switch positions per direction are possible.

Features

Control panel installation at rear or with front plate. 1 to 8 actuating directions with 1 or 2 switch positions per actuating direction. Switch positions as stayput switch or spring return switch in various combinations. Center-position switch. Pushbutton in handle.



017646

KCA1E1E1E1E0000W

Series KC...

- Tab connector 2.8 x 0.5
- 4 actuating directions
- Bellows for panel mounting (W)



026100

KCA2A2A2A2A0000WZ

Series KC...

- Tab connector 2.8 x 0.5
- 4 actuating directions

- Bellows for panel mounting (W)
- Center-position switch (Z)



052923

KCA6A6A6A6A0000V0DX

Series KC...

- Tab connector 2.8 x 0.5
- 4 actuating directions
- Interlocking in switch position 0 (V0)
- Pushbutton in handle (D)
- Bellows for surface mounting (X)



091860

KCB005B005A0000W

Series KC...

- Screw terminal
- 2 actuating directions
- Bellows for panel mounting (W)



020177

KCB1E001E000000W

Series KC...

- Screw terminal
- 2 actuating directions
- Bellows for panel mounting (W)



034227

KCB1E1E1E1E0000DW

Series KC...

- Screw terminal
- 4 actuating directions
- Bellows for panel mounting (W)



018854

KCB1E1E1E1E0000W

Series KC...

- Screw terminal
- 4 actuating directions
- Bellows for panel mounting (W)



093675

KCB2A002A000000DW

Series KC...

- Screw terminal
- 2 actuating directions
- Pushbutton in handle (D)
- Bellows for panel mounting (W)



020160

KCB2A002A000000WZ

Series KC...

- Screw terminal
- 2 actuating directions
- Bellows for panel mounting (W)
- Center-position switch (Z)



018372

KCB2A2A2A2A0000WZ

Series KC...

- Screw terminal
- 4 actuating directions
- Bellows for panel mounting (W)
- Center-position switch (Z)



094745

KCB2B002A000000W

Series KC...

- Screw terminal
- 2 actuating directions
- Bellows for panel mounting (W)



039194

KCB2B002B000000V0XZ

Series KC...

- Screw terminal
- 2 actuating directions
- Interlocking in switch position 0 (V0)
- Bellows for surface mounting (X)
- Center-position switch (Z)



024780

KCB2B002B000000W

Series KC...

- Screw terminal
- 2 actuating directions
- Bellows for panel mounting (W)



026067

KCB2B2B2B2B0000V0W

Series KC...

- Screw terminal
- 4 actuating directions
- Interlocking in switch position 0 (V0)
- Bellows for panel mounting (W)



023471

KCB2B2B2B2B0000W

Series KC...

- Screw terminal
- 4 actuating directions
- Bellows for panel mounting (W)



027996

KCB2D002D000000W

Series KC...

- Screw terminal
- 2 actuating directions
- Bellows for panel mounting (W)



077536

KCB2D2D2D2D0000DV0W

Series KC...

- Screw terminal
- 4 actuating directions
- Pushbutton in handle (D)
- Interlocking in switch position 0 (V0)
- Bellows for panel mounting (W)



072761

KCB3B003B000000V0WZ

Series KC...

- Screw terminal
- 2 actuating directions
- Interlocking in switch position 0 (V0)
- Bellows for panel mounting (W)
- Center-position switch (Z)



039093

KCB3B003B000000V0XZ

Series KC...

- Screw terminal
- 2 actuating directions
- Interlocking in switch position 0 (V0)
- Bellows for surface mounting (X)
- Center-position switch (Z)



083331

KCB3E3E3E3E0000DV0W

Series KC...

- Screw terminal
- 4 actuating directions
- Pushbutton in handle (D)
- Interlocking in switch position 0 (V0)
- Bellows for panel mounting (W)



020176

KCB4E004E000000W

Series KC...

- Screw terminal
- 2 actuating directions
- Bellows for panel mounting (W)



092414

KCB4E004E000000XZ

Series KC...

- Screw terminal
- 2 actuating directions
- Bellows for surface mounting (X)
- Center-position switch (Z)



050064

KCB4E4E4E4E0000DV0W

Series KC...

- Screw terminal
- 4 actuating directions
- Pushbutton in handle (D)
- Interlocking in switch position 0 (V0)
- Bellows for panel mounting (W)

**025572**

KCB4E4E4E4E0000V0W

Series KC...

- Screw terminal
- 4 actuating directions
- Interlocking in switch position 0 (V0)
- Bellows for panel mounting (W)

**075358**

KCB4E4E4E4E5678DV0WZ

Series KC...

- Screw terminal
- 8 actuating directions
- Pushbutton in handle (D)
- Interlocking in switch position 0 (V0)
- Bellows for panel mounting (W)
- Center-position switch (Z)

**022204**

KCB5B005B000000W

Series KC...

- Screw terminal
- 2 actuating directions
- Bellows for panel mounting (W)



083493

KCB5D005D000000W

Series KC...

- Screw terminal
- 2 actuating directions
- Bellows for panel mounting (W)



045255

KCB6B6B6B6B0000V1WZ

Series KC...

- Screw terminal
- 4 actuating directions
- Interlocking in switch position 1 to 2 (V1)
- Bellows for panel mounting (W)
- Center-position switch (Z)

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: eai@nt-rt.ru || сайт: <https://euchner.nt-rt.ru/>