

Позиционные выключатели EN 50 041

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: eai@nt-rt.ru || сайт: <https://euchner.nt-rt.ru/>

POSITION SWITCH NG ACCORDING TO EN 50 041



Description

EUCHNER position switches are high-performance position switches with a long mechanical life; designed according to the European standard EN 50 041. The user can choose between lever arm or plunger drive and 10 different actuating heads with 4x90° adjustment.

Features

- Robust and lasting design
- Degree of protection IP67
- Metal housing with 10 different actuating heads
- Mechanical life up to 30 million operating cycles
- With cable entry or plug connection
- Switching element with snap-action function or automatic disconnection
- Operating point accuracy +/- 0.002 mm max.



088616

NG1DO-510-M

Position switch NG.DO

- Plunger actuator DO (chisel plunger)
- Cable entry M20 x 1.5



079911

NG1FO-510-M

Position switch NG.FO, spring actuator

- Spring actuator FO
- Cable entry M20 x 1.5
- Actuating direction: all sides

**090029**

NG1FO-510L060-M

Position switch NG.FO, spring actuator

- Spring actuator FO
- Cable entry M20 x 1.5
- Actuating direction: all sides
- LED indicator

**079926**

NG1HB-510-M

Position switch NG.HB, plastic roller

- Roller lever arm HB (plastic roller)
- Cable entry M20 x 1.5

**090360**

NG1HB-510L060-M

Position switch NG.HB, plastic roller

- Roller lever arm HB (plastic roller)
- Cable entry M20 x 1.5
- LED indicator



079927

NG1HS-510-M

Position switch NG.HS, steel roller

- Roller lever arm HS (steel roller)
- Cable entry M20 x 1.5



079937

NG1HS-510L060-M

Position switch NG.HS, steel roller

- Roller lever arm HS (steel roller)
- Cable entry M20 x 1.5
- LED indicator



088604

NG1KO-510-M

Position switch NG.KO

- Plunger actuator KO (ball plunger)
- Cable entry M20 x 1.5



090197

NG1KO-510L060-M

Position switch NG.KO

- Plunger actuator KO (ball plunger)
- Cable entry M20 x 1.5

- LED indicator



079941

NG1RG-510-M

Position switch NG.RG

- Plunger actuator RG (roller plunger, plastic roller)
- Cable entry M20 x 1.5



090398

NG1RG-510L060-M

Position switch NG.RG

- Plunger actuator RG (roller plunger, plastic roller)
- Cable entry M20 x 1.5
- LED indicator



088619

NG1RK-510-M

Position switch NG.RK

- Plunger actuator RK (roller plunger with small steel roller)
- Cable entry M20 x 1.5



086324

NG1RL-510-M

Position switch NG.RL, extended roller plunger

- Plunger actuator RL (extended roller plunger)
- Cable entry M20 x 1.5



090602

NG1RL-510L060-M

Position switch NG.RL, extended roller plunger

- Plunger actuator RL (extended roller plunger)
- Cable entry M20 x 1.5
- LED indicator



079942

NG1RS-510-M

Position switch NG.RS, steel roller

- Plunger actuator RS (roller plunger, steel roller)
- Cable entry M20 x 1.5



079943

NG1RS-510L060-M

Position switch NG.RS, steel roller

- Plunger actuator RS (roller plunger, steel roller)
- Cable entry M20 x 1.5
- LED indicator



088609

NG1SB-510-M

Position switch NG.SB, plastic rod

- Pivoted lever arm SB (plastic rod)
- Cable entry M20 x 1.5

**090577**

NG1SB-510L060-M

Position switch NG.SB, plastic rod

- Pivoted lever arm SB (plastic rod)
- Cable entry M20 x 1.5
- LED indicator

**079932**

NG1SM-510-M

Position switch NG.SM, aluminum rod

- Pivoted lever arm SM (aluminum rod)
- Cable entry M20 x 1.5

**090575**

NG1SM-510L060-M

Position switch NG.SM, aluminum rod

- Pivoted lever arm SM (aluminum rod)
- Cable entry M20 x 1.5
- LED indicator



086322

NG1VB-510-M

Position switch NG.VB, adjustable, plastic roller

- Adjustable roller lever arm VB (plastic)
- Cable entry M20 x 1.5



091288

NG1VB-510L060-M

Position switch NG.VB, adjustable, plastic roller

- Adjustable roller lever arm VB (plastic)
- Cable entry M20 x 1.5
- LED indicator



079934

NG1VS-510-M

Position switch NG.VS, adjustable, steel roller

- Adjustable roller lever arm VS (steel roller)
- Cable entry M20 x 1.5



090599

NG1VS-510L060-M

Position switch NG.VS, adjustable, steel roller

- Adjustable roller lever arm VS (steel roller)
- Cable entry M20 x 1.5

- LED indicator



079945

NG1WO-510-M

Position switch NG.WO

- Plunger actuator WO (rounded plunger)
- Cable entry M20 x 1.5



089088

NG2HB-510

Position switch NG.HB, plastic roller, plug connector SR6

- Roller lever arm HB (plastic roller)
- Plug connector SR6



089089

NG2HB-510L060

Position switch NG.HB, plastic roller, plug connector SR6

- Roller lever arm HB (plastic roller)
- Plug connector SR6
- LED indicator



088631

NG2HB-510SVM5

Position switch NG.HB, plastic roller, plug connector SVM5

- Roller lever arm HB (plastic roller)
- Plug connector M12/SVM5



086561

NG2HB-510SVM5C1883

Position switch NG.HB, plastic roller, plug connector SVM5

- Roller lever arm HB (plastic roller)
- M12 connector and pin assignment for LED indicator (pin 3 not used)



090851

NG2HS-510

Position switch NG.HS, steel roller, plug connector SR6

- Roller lever arm HS (steel roller)
- Plug connector SR6



089090

NG2HS-510L060

Position switch NG.HS, steel roller, plug connector SR6

- Roller lever arm HS (steel roller)
- Plug connector SR6
- LED indicator



090866

NG2HS-510SVM5

Position switch NG.HS, steel roller, plug connector SVM5

- Roller lever arm HS (steel roller)
- Plug connector M12/SVM5



090931

NG2KO-510SVM5

Position switch NG.KO, plug connector SVM5

- Plunger actuator KO (ball plunger)
- Plug connector M12/SVM5



090021

NG2RG-510

Position switch NG.RG, plastic roller, plug connector SR6

- Plunger actuator RG (roller plunger, plastic roller)
- Plug connector SR6



090949

NG2RG-510L060

Position switch NG.RG, plastic roller, plug connector SR6

- Plunger actuator RG (roller plunger, plastic roller)
- Plug connector SR6
- LED indicator



090960

NG2RG-510SVM5

Position switch NG.RG, plastic roller, plug connector SVM5

- Plunger actuator RG (roller plunger, plastic roller)
- Plug connector M12/SVM5



090918

NG2RK-510

Position switch NG.RK, small steel roller, plug connector SR6

- Plunger actuator RK (roller plunger with small steel roller)
- Plug connector SR6



091300

NG2RK-510L060

Position switch NG.RK, small steel roller, plug connector SR6

- Plunger actuator RK (roller plunger with small steel roller)
- Plug connector SR6



089020

NG2RK-510SVM5

Position switch NG.RK, small steel roller, plug connector SVM5

- Plunger actuator RK (roller plunger with small steel roller)
- Plug connector M12/SVM5



091285

NG2RL-510L060

Position switch NG.RL, extended roller plunger, plug connector SR6

- Plunger actuator RL (extended roller plunger)
- Plug connector SR6
- LED indicator



090953

NG2RS-510

Position switch NG.RS, steel roller, plug connector SR6

- Plunger actuator RS (roller plunger, steel roller)
- Plug connector SR6



088632

NG2RS-510SVM5

Position switch NG.RS, steel roller, plug connector SVM5

- Plunger actuator RS (roller plunger, steel roller)
- Plug connector M12/SVM5



091303

NG2SB-510SVM5

Position switch NG.SB, plug connector SVM5, plastic rod

- Pivoted lever arm SB (plastic rod)
- Plug connector M12/SVM5



094059

NG2SM-510SVM5

Position switch NG.SM, plug connector SVM5, aluminum rod

- Pivoted lever arm SM (aluminum rod)
- Plug connector M12/SVM5



090012

NG2WO-510

Position switch NG.WO, plug connector SR6

- Plunger actuator WO (rounded plunger)
- Plug connector SR6



090018

NG2WO-510SVM5

Position switch NG.WO, plug connector SVM5

- Plunger actuator WO (rounded plunger)
- Plug connector M12/SVM5

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: eai@nt-rt.ru || сайт: <https://euchner.nt-rt.ru/>