

Считывающие транспондерные блоки, с внешней оценкой состояния SET-AX

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: eai@nt-rt.ru || сайт: <https://euchner.nt-rt.ru/>

READ HEADS CET-AX



Description

- Read head with guard locking and guard lock monitoring
- Up to Category 4
- High locking forces up to 6,500 N
- Integrated transponder coding
- Metal housing

Design and functionality

With the read head CET-AX, EUCHNER provides monitored guard locking based on non-contact transponder technology. This means that the switch can also be used on systems with overtraveling machine movements for personnel protection.

When closing the guard (hinged or sliding door), the spring-loaded transponder in the actuator is inserted into the recess on the read head.

The read head detects the closed guard in its guard locked position. The CES evaluation electronics enables the safety circuit when the guard is locked.

When the moving parts of the machine come to a standstill, the solenoid integrated into the read head can be activated by a safe standstill monitor or by a timer relay. The solenoid's plunger then raises the spring-loaded transponder, which allows the guard to be opened.



100399

CET1-AX-LDA-00-50X-SE

Read head CET1-AX-... M12, with guard locking and guard lock monitoring, double ramp

- Read head with guard locking

- Locking force up to 6500 N
- Up to category 4 / PL e according to EN ISO 13849-1
- With plug connector M12
- 2 LEDs (1 freely configurable)
- With double ramp
- Approach directions A and C (delivery state)



102161

CET1-AX-LRA-00-50F-SA

Read head CET1-AX-... M12, with guard locking and guard lock monitoring, escape release

- Read head with guard locking
- Locking force up to 6500 N
- Up to category 4 / PL e according to EN ISO 13849-1
- With plug connector M12
- 2 LEDs (1 freely configurable)
- With escape release, 75 mm long
- Approach direction A (delivery state)



104062

CET1-AX-LRA-00-50L-SA

Read head CET1-AX-... M12, with guard locking and guard lock monitoring, 2 freely configurable LEDs

- Read head with guard locking
- Locking force up to 6500 N
- Up to category 4 / PL e according to EN ISO 13849-1
- With plug connector M12
- 2 LEDs (2 freely configurable)
- Approach direction A (delivery state)



095735

CET1-AX-LRA-00-50X-SA

Read head CET1-AX-..., M12, with guard locking and guard lock monitoring

- Read head with guard locking
- Locking force up to 6500 N
- Up to category 4 / PL e according to EN ISO 13849-1
- With plug connector M12
- 2 LEDs (1 freely configurable)
- Approach direction A (delivery state)

**102988**

CET1-AX-LRA-00-50X-SC

Read head CET1-AX-..., 2 plug connectors M8, with guard locking and guard lock monitoring

- Read head with guard locking
- Locking force up to 6500 N
- Up to category 4 / PL e according to EN ISO 13849-1
- With 2 plug connectors M8
- 2 LEDs (1 freely configurable)
- Approach direction A (delivery state)

**104051**

CET1-AX-LRA-00-50X-SF

Read head CET1-AX-..., M12, with guard locking and guard lock monitoring

- Read head with guard locking
- Locking force up to 6500 N
- Up to category 4 / PL e according to EN ISO 13849-1
- With plug connector M12 (can be rotated by 360°)
- 2 LEDs (1 freely configurable)
- Approach direction A (delivery state)



106039

CET2-AX-LRA-00-50X-SA

Read head CET2-AX-... M12, with guard locking and guard lock monitoring

- Read head with guard locking
- Locking force up to 6500 N
- Up to category 4 / PL e according to EN ISO 13849-1
- With plug connector M12
- 2 LEDs (1 freely configurable)
- Approach direction A (delivery state)

**109932**

CET2-AX-LRA-00-50X-SC

Read head CET2-AX-..., 2 plug connectors M8, with guard locking and guard lock monitoring

- Read head with guard locking
- Locking force up to 6500 N
- Up to category 4 / PL e according to EN ISO 13849-1
- With 2 plug connectors M8
- 2 LEDs (1 freely configurable)
- Approach direction A (delivery state)

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: eai@nt-rt.ru || сайт: <https://euchner.nt-rt.ru/>