

Многофункциональные дверные модули MGB2-.H.-MLI

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: eai@nt-rt.ru || сайт: <https://euchner.nt-rt.ru/>

INTERLOCKING/LOCKING SETS MGB2-.H.-MLI



- Flexible connection to any bus module MBM
- Remote or direct mounting of bus module MBM
- Modular design with submodules
- Submodule replacement in operation
- For doors hinged on the right as well as on the left
- Integrated alignment aid



167034

MGB2-L1H-MLI-U-AA-L-167034

Locking set MGB2-L1... (4 pushbuttons, emergency stop, closed-circuit current principle, door hinge on left)

- Guard locking with guard lock monitoring
- Illuminated emergency stop according to ISO 13850
- 4 illuminated pushbuttons
- Adjustable door hinge; factory setting: left
- Unicode
- For connection to any bus module MBM
- Remote or direct mounting of bus module MBM



167033

MGB2-L1H-MLI-U-AA-R-167033

Locking set MGB2-L1... (4 pushbuttons, emergency stop, closed-circuit current principle, door hinge on right)

- Guard locking with guard lock monitoring
- Illuminated emergency stop according to ISO 13850
- 4 illuminated pushbuttons
- Adjustable door hinge; factory setting: right
- Unicode
- For connection to any bus module MBM
- Remote or direct mounting of bus module MBM



161929

MGB2-L1H-MLI-U-CA-L-161929

Locking set MGB2-L1... (3 pushbuttons, M12 plug connector for enabling switch, closed-circuit current principle, door hinge on left)

- Guard locking with guard lock monitoring
- 3 illuminated pushbuttons
- M12 plug connector for enabling switch
- Adjustable door hinge; factory setting: left
- Unicode
- For connection to any bus module MBM
- Remote or direct mounting of bus module MBM



172199

MGB2-L1H-MLI-U-CA-L-172199

Locking set MGB2-L1... (2 pushbuttons, emergency stop, closed-circuit current principle, door hinge on left)

- Guard locking with guard lock monitoring
- Illuminated emergency stop according to ISO 13850
- 2 illuminated white pushbuttons with symbol
- Adjustable door hinge; factory setting: left
- Unicode
- For connection to any bus module MBM
- Remote or direct mounting of bus module MBM



161928

MGB2-L1H-MLI-U-CA-R-161928

Locking set MGB2-L1... (3 pushbuttons, M12 plug connector for enabling switch, closed-circuit current principle, door hinge on right)

- Guard locking with guard lock monitoring
- 3 illuminated pushbuttons
- M12 plug connector for enabling switch
- Adjustable door hinge; factory setting: right
- Unicode
- For connection to any bus module MBM
- Remote or direct mounting of bus module MBM



172198

MGB2-L1H-MLI-U-CA-R-172198

Locking set MGB2-L1... (2 pushbuttons, emergency stop, closed-circuit current principle, door hinge on right)

- Guard locking with guard lock monitoring
- Illuminated emergency stop according to ISO 13850
- 2 illuminated white pushbuttons with symbol
- Adjustable door hinge; factory setting: right
- Unicode
- For connection to any bus module MBM
- Remote or direct mounting of bus module MBM



162535

MGB2-L1H-MLI-U-DA-L-162535

Locking set MGB2-L1... (2 pushbuttons, emergency stop, closed-circuit current principle, door hinge on left)

- Guard locking with guard lock monitoring
- Illuminated emergency stop according to ISO 13850
- 2 illuminated pushbuttons
- Adjustable door hinge; factory setting: left
- Unicode
- For connection to any bus module MBM
- Remote or direct mounting of bus module MBM



162534

MGB2-L1H-MLI-U-DA-R-162534

Locking set MGB2-L1... (2 pushbuttons, emergency stop, closed-circuit current principle, door hinge on right)

- Guard locking with guard lock monitoring
- Illuminated emergency stop according to ISO 13850
- 2 illuminated pushbuttons
- Adjustable door hinge; factory setting: right
- Unicode
- For connection to any bus module MBM
- Remote or direct mounting of bus module MBM



166683

MGB2-L1HE-MLI-U-CA-L-166683

Locking set MGB2-L1... (3 pushbuttons, emergency stop, key-operated rotary switch, closed-circuit current principle, door hinge on left)

- Guard locking with guard lock monitoring
- Illuminated emergency stop according to ISO 13850
- 3 illuminated pushbuttons
- OM.R key-operated rotary switch (2-channel)
- Adjustable door hinge; factory setting: left
- With escape release
- Unicode
- For connection to any bus module MBM
- Remote or direct mounting of bus module MBM



169360

MGB2-L1HE-MLI-U-CA-L-169360

Locking set MGB2-L1... (3 pushbuttons, emergency stop, key-operated rotary switch, closed-circuit current principle, door hinge on left)

- Guard locking with guard lock monitoring

- Illuminated emergency stop according to ISO 13850
- 3 illuminated pushbuttons
- OM.R key-operated rotary switch (2-channel)
- Adjustable door hinge; factory setting: left
- With escape release
- Unicode
- For connection to any bus module MBM
- Remote or direct mounting of bus module MBM



170580

MGB2-L1HE-MLI-U-CA-L-170580

Locking set MGB2-L1... (3 pushbuttons, emergency stop, closed-circuit current principle, door hinge on left)

- Guard locking with guard lock monitoring
- Illuminated emergency stop according to ISO 13850
- 3 illuminated pushbuttons
- Adjustable door hinge; factory setting: left
- With escape release
- Unicode
- For connection to any bus module MBM
- Remote or direct mounting of bus module MBM



166682

MGB2-L1HE-MLI-U-CA-R-166682

Locking set MGB2-L1... (3 pushbuttons, emergency stop, key-operated rotary switch, closed-circuit current principle, door hinge on right)

- Guard locking with guard lock monitoring
- Illuminated emergency stop according to ISO 13850
- 3 illuminated pushbuttons
- OM.R key-operated rotary switch (2-channel)
- Adjustable door hinge; factory setting: right
- With escape release
- Unicode
- For connection to any bus module MBM
- Remote or direct mounting of bus module MBM



169359

MGB2-L1HE-MLI-U-CA-R-169359

Locking set MGB2-L1... (3 pushbuttons, emergency stop, key-operated rotary switch, closed-circuit current principle, door hinge on right)

- Guard locking with guard lock monitoring
- Illuminated emergency stop according to ISO 13850
- 3 illuminated pushbuttons
- OM.R key-operated rotary switch (2-channel)
- Adjustable door hinge; factory setting: right
- With escape release
- Unicode
- For connection to any bus module MBM
- Remote or direct mounting of bus module MBM



170579

MGB2-L1HE-MLI-U-CA-R-170579

Locking set MGB2-L1... (3 pushbuttons, emergency stop, closed-circuit current principle, door hinge on right)

- Guard locking with guard lock monitoring
- Illuminated emergency stop according to ISO 13850
- 3 illuminated pushbuttons
- Adjustable door hinge; factory setting: right
- With escape release
- Unicode
- For connection to any bus module MBM
- Remote or direct mounting of bus module MBM



165568

MGB2-L1HE-MLI-U-DA-L-165568

Locking set MGB2-L1... (2 pushbuttons, emergency stop, closed-circuit current principle, door hinge on left)

- Guard locking with guard lock monitoring
- Illuminated emergency stop according to ISO 13850
- 2 illuminated pushbuttons
- Adjustable door hinge; factory setting: left
- With escape release
- Unicode
- For connection to any bus module MBM
- Remote or direct mounting of bus module MBM



168958

MGB2-L1HE-MLI-U-DA-L-168958

Locking set MGB2-L1... (2 pushbuttons, closed-circuit current principle, door hinge on left)

- Guard locking with guard lock monitoring
- 2 illuminated pushbuttons
- Adjustable door hinge; factory setting: left
- With escape release
- Unicode
- For connection to any bus module MBM
- Remote or direct mounting of bus module MBM



165567

MGB2-L1HE-MLI-U-DA-R-165567

Locking set MGB2-L1... (2 pushbuttons, emergency stop, closed-circuit current principle, door hinge on right)

- Guard locking with guard lock monitoring
- Illuminated emergency stop according to ISO 13850
- 2 illuminated pushbuttons
- Adjustable door hinge; factory setting: right
- With escape release
- Unicode
- For connection to any bus module MBM
- Remote or direct mounting of bus module MBM



168957

MGB2-L1HE-MLI-U-DA-R-168957

Locking set MGB2-L1... (2 pushbuttons, open-circuit current principle, door hinge on right)

- Guard locking with guard lock monitoring
- 2 illuminated pushbuttons
- Adjustable door hinge; factory setting: right
- With escape release
- Unicode
- For connection to any bus module MBM
- Remote or direct mounting of bus module MBM



165207

MGB2-L1HE-MLI-U-MA-L-165207

Locking set MGB2-L1... (2 pushbuttons, emergency stop, closed-circuit current principle, door hinge on left)

- Guard locking with guard lock monitoring
- Illuminated emergency stop according to ISO 13850
- 2 illuminated pushbuttons
- Adjustable door hinge; factory setting: left
- With escape release
- Unicode
- For connection to any bus module MBM
- Remote or direct mounting of bus module MBM



165206

MGB2-L1HE-MLI-U-MA-R-165206

Locking set MGB2-L1... (2 pushbuttons, emergency stop, closed-circuit current principle, door hinge on right)

- Guard locking with guard lock monitoring
- Illuminated emergency stop according to ISO 13850

- 2 illuminated pushbuttons
- Adjustable door hinge; factory setting: right
- With escape release
- Unicode
- For connection to any bus module MBM
- Remote or direct mounting of bus module MBM



169312

MGB2-L2HE-MLI-U-CA-L-169312

Locking set MGB2-L2... (4 pushbuttons, emergency stop, key-operated rotary switch, open-circuit current principle, door hinge on left)

- Guard locking with guard lock monitoring
- Illuminated emergency stop according to ISO 13850
- 1 selector switches 1 x 90°, form V, illuminated
- 4 illuminated pushbuttons with symbol
- Adjustable door hinge; factory setting: left
- With escape release
- Unicode
- For connection to any bus module MBM
- Remote or direct mounting of bus module MBM



169311

MGB2-L2HE-MLI-U-CA-R-169311

Locking set MGB2-L2... (4 pushbuttons, emergency stop, key-operated rotary switch, open-circuit current principle, door hinge on right)

- Guard locking with guard lock monitoring
- Illuminated emergency stop according to ISO 13850
- 1 selector switches 1 x 90°, form V, illuminated
- 4 illuminated pushbuttons with symbol
- Adjustable door hinge; factory setting: right
- With escape release
- Unicode
- For connection to any bus module MBM
- Remote or direct mounting of bus module MBM



165570

MGB2-L2HE-MLI-U-DA-L-165570

Locking set MGB2-L2... (2 pushbuttons, emergency stop, open-circuit current principle, door hinge on left)

- Guard locking with guard lock monitoring
- Illuminated emergency stop according to ISO 13850
- 2 illuminated pushbuttons
- Adjustable door hinge; factory setting: left
- With escape release
- Unicode
- For connection to any bus module MBM
- Remote or direct mounting of bus module MBM



165569

MGB2-L2HE-MLI-U-DA-R-165569

Locking set MGB2-L2... (2 pushbuttons, emergency stop, open-circuit current principle, door hinge on right)

- Guard locking with guard lock monitoring
- Illuminated emergency stop according to ISO 13850
- 2 illuminated pushbuttons
- Adjustable door hinge; factory setting: right
- With escape release
- Unicode
- For connection to any bus module MBM
- Remote or direct mounting of bus module MBM

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: eai@nt-rt.ru || сайт: <https://euchner.nt-rt.ru/>