

Предохранительные выключатели в пластиковом корпусе, с мониторингом блокировки, типа ТР

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: eai@nt-rt.ru || сайт: <https://euchner.nt-rt.ru/>

SAFETY SWITCH WITH GUARD LOCKING AND GUARD LOCK MONITORING TP



Description

The safety switches TP ensure that guards remain in the closed position until a hazardous movement, e.g. an over-traveling main spindle, has come to a standstill.

Similarly, opening of the guard during a process is prevented. Thanks to their slim design, they are ideal for universal mounting on profile rails. Safety switches TP have reinforced plastic housings. They thus provide ideal installation opportunities for the automation, assembly and handling technology sectors.

Features

- Electrical or mechanical guard locking
- Different switching contacts
- 3 cable entries, optionally with plug connectors



084115

TP1-4131A024M

Safety switch TP without door monitoring contact

- Auxiliary release on the front
- Without door monitoring contact
- Increased horizontal overtravel



088202

TP1-4131A024SR11

Safety switch TP, plug connector SR11, without door monitoring contact

- Auxiliary release on the front
- Without door monitoring contact
- Increased horizontal overtravel
- Plug connector

**084116**

TP1-4131A110M

Safety switch TP without door monitoring contact

- Auxiliary release on the front
- Without door monitoring contact
- Increased horizontal overtravel

**084117**

TP1-4131A230M

Safety switch TP without door monitoring contact

- Auxiliary release on the front
- Without door monitoring contact
- Increased horizontal overtravel

**084150**

TP1-4131K024M

Safety switch TP, without door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- Without door monitoring contact
- Increased overtravel for horizontal and vertical approach directions

**088217**

TP1-4131K024SR11

Safety switch TP, plug connector SR11, without door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- Without door monitoring contact
- Increased overtravel for horizontal and vertical approach directions
- Plug connector

**084254**

TP1-4131K110M

Safety switch TP, without door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- Without door monitoring contact
- Increased overtravel for horizontal and vertical approach directions

**084255**

TP1-4131K230M

Safety switch TP, without door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- Without door monitoring contact
- Increased overtravel for horizontal and vertical approach directions



094058

TP1-528A024L024M

Safety switch TP without door monitoring contact

- Auxiliary release on the front
- Without door monitoring contact
- Increased horizontal overtravel
- With LED function display

**084295**

TP1-528A024M

Safety switch TP without door monitoring contact

- Auxiliary release on the front
- Without door monitoring contact
- Increased horizontal overtravel

**087431**

TP1-528A024SR6

Safety switch TP, plug connector SR6, without door monitoring contact

- Auxiliary release on the front
- Without door monitoring contact
- Increased horizontal overtravel
- Plug connector

**084300**

TP1-528A110M

Safety switch TP without door monitoring contact

- Auxiliary release on the front
- Without door monitoring contact
- Increased horizontal overtravel



087435

TP1-528A110SR6

Safety switch TP, plug connector SR6, without door monitoring contact

- Auxiliary release on the front
- Without door monitoring contact
- Increased horizontal overtravel
- Plug connector



084304

TP1-528A230M

Safety switch TP without door monitoring contact

- Auxiliary release on the front
- Without door monitoring contact
- Increased horizontal overtravel



084342

TP1-528K024M

Safety switch TP, without door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- Without door monitoring contact
- Increased overtravel for horizontal and vertical approach directions



088210

TP1-528K024SR6

Safety switch TP, plug connector SR6, without door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- Without door monitoring contact
- Increased overtravel for horizontal and vertical approach directions
- Plug connector



093459

TP1-538A024L024M

Safety switch TP without door monitoring contact

- Auxiliary release on the front
- Without door monitoring contact
- Increased horizontal overtravel
- With LED function display



084310

TP1-538A024M

Safety switch TP without door monitoring contact

- Auxiliary release on the front
- Without door monitoring contact
- Increased horizontal overtravel



087433

TP1-538A024SR6

Safety switch TP, plug connector SR6, without door monitoring contact

- Auxiliary release on the front
- Without door monitoring contact
- Increased horizontal overtravel
- Plug connector



084315

TP1-538A110M

Safety switch TP without door monitoring contact

- Auxiliary release on the front
- Without door monitoring contact
- Increased horizontal overtravel



087436

TP1-538A110SR6

Safety switch TP, plug connector SR6, without door monitoring contact

- Auxiliary release on the front
- Without door monitoring contact
- Increased horizontal overtravel
- Plug connector



084320

TP1-538A230M

Safety switch TP without door monitoring contact

- Auxiliary release on the front
- Without door monitoring contact
- Increased horizontal overtravel



084343

TP1-538K024M

Safety switch TP, without door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- Without door monitoring contact
- Increased overtravel for horizontal and vertical approach directions



088212

TP1-538K024SR6

Safety switch TP, plug connector SR6, without door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- Without door monitoring contact
- Increased overtravel for horizontal and vertical approach directions
- Plug connector



096528

TP2-2121A024M

Safety switch TP without door monitoring contact

- Auxiliary release on the front
- Without door monitoring contact
- Increased horizontal overtravel



084125

TP2-4131A024M

Safety switch TP without door monitoring contact

- Auxiliary release on the front
- Without door monitoring contact
- Increased horizontal overtravel

**088203**

TP2-4131A024SR11

Safety switch TP, plug connector SR11, without door monitoring contact

- Auxiliary release on the front
- Without door monitoring contact
- Increased horizontal overtravel
- Plug connector

**084126**

TP2-4131A110M

Safety switch TP without door monitoring contact

- Auxiliary release on the front
- Without door monitoring contact
- Increased horizontal overtravel

**084128**

TP2-4131A230M

Safety switch TP without door monitoring contact

- Auxiliary release on the front
- Without door monitoring contact
- Increased horizontal overtravel

**084253**

TP2-4131K024M

Safety switch TP, without door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- Without door monitoring contact
- Increased overtravel for horizontal and vertical approach directions



088218

TP2-4131K024SR11

Safety switch TP, plug connector SR11, without door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- Without door monitoring contact
- Increased overtravel for horizontal and vertical approach directions
- Plug connector



084325

TP2-528A024M

Safety switch TP without door monitoring contact

- Auxiliary release on the front
- Without door monitoring contact
- Increased horizontal overtravel



087441

TP2-528A024SR6

Safety switch TP, plug connector SR6, without door monitoring contact

- Auxiliary release on the front
- Without door monitoring contact
- Increased horizontal overtravel
- Plug connector



084330

TP2-528A110M

Safety switch TP without door monitoring contact

- Auxiliary release on the front
- Without door monitoring contact
- Increased horizontal overtravel



087444

TP2-528A110SR6

Safety switch TP, plug connector SR6, without door monitoring contact

- Auxiliary release on the front
- Without door monitoring contact
- Increased horizontal overtravel



084332

TP2-528A230M

Safety switch TP without door monitoring contact

- Auxiliary release on the front
- Without door monitoring contact
- Increased horizontal overtravel



084344

TP2-528K024M

Safety switch TP, without door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- Without door monitoring contact
- Increased overtravel for horizontal and vertical approach directions



088214

TP2-528K024SR6

Safety switch TP, plug connector SR6, without door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- Without door monitoring contact
- Increased overtravel for horizontal and vertical approach directions
- Plug connector



084333

TP2-538A024M

Safety switch TP without door monitoring contact

- Auxiliary release on the front
- Without door monitoring contact
- Increased horizontal overtravel



087442

TP2-538A024SR6

Safety switch TP, plug connector SR6, without door monitoring contact

- Auxiliary release on the front
- Without door monitoring contact
- Increased horizontal overtravel
- Plug connector

**084334**

TP2-538A110M

Safety switch TP without door monitoring contact

- Auxiliary release on the front
- Without door monitoring contact
- Increased horizontal overtravel

**084335**

TP2-538A230M

Safety switch TP without door monitoring contact

- Auxiliary release on the front
- Without door monitoring contact
- Increased horizontal overtravel

**087449**

TP2-538A230SR6

Safety switch TP, plug connector SR6, without door monitoring contact

- Auxiliary release on the front
- Without door monitoring contact
- Increased horizontal overtravel
- Plug connector

**084346**

TP2-538K024M

Safety switch TP, without door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- Without door monitoring contact
- Increased overtravel for horizontal and vertical approach directions



088215

TP2-538K024SR6

Safety switch TP, plug connector SR6, without door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- Without door monitoring contact
- Increased overtravel for horizontal and vertical approach directions
- Plug connector



093634

TP3-2131A024L024M

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel
- With LED function display



084142

TP3-2131A024M

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel

**084285**

TP3-2131A024MC1743

Safety switch TP with door monitoring contact, escape release

- Auxiliary release on the front
- Escape release from the rear
- With door monitoring contact
- Increased horizontal overtravel

**084290**

TP3-2131A024MC1761

Safety switch TP with door monitoring contact, additional cable entry

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel

**084289**

TP3-2131A024MC1787

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel

**087400**

TP3-2131A024MC1993

Safety switch TP with door monitoring contact, escape release

- Auxiliary release on the front
- Escape release from the rear
- With door monitoring contact
- Increased horizontal overtravel



105546

TP3-2131A024RC18C1993EXT2

Safety switch TP, plug connector RC18, with door monitoring contact, escape release, 2 illuminated pushbuttons

- Auxiliary release on the front
- Escape release from the rear
- 2 illuminated pushbuttons
- With door monitoring contact
- Increased horizontal overtravel
- Plug connector



088205

TP3-2131A024SR11

Safety switch TP, plug connector SR11, with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel
- Plug connector



097897

TP3-2131A024SR11C1993

Safety switch TP, plug connector SR11, with door monitoring contact, escape release

- Auxiliary release on the front
- Escape release from the rear
- With door monitoring contact
- Increased horizontal overtravel

- Plug connector



084143

TP3-2131A110M

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel



084144

TP3-2131A230M

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel



084264

TP3-2131K024M

Safety switch TP with door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- With door monitoring contact
- Increased overtravel for horizontal and vertical approach directions



088220

TP3-2131K024SR11

Safety switch TP, plug connector SR11, with door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- With door monitoring contact
- Increased overtravel for horizontal and vertical approach directions
- Plug connector



084265

TP3-2131K230M

Safety switch TP with door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- With door monitoring contact
- Increased overtravel for horizontal and vertical approach directions



105388

TP3-4121A024BHA12EXT1A

Safety switch TP, plug connector BHA12, pushbutton and cover for indicators, with door monitoring contact

- Auxiliary release on the front
- Pushbutton and cover for indicators
- With door monitoring contact
- Increased horizontal overtravel
- Plug connector



093636

TP3-4121A024L024M

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel

- With LED function display



084135

TP3-4121A024M

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel



087427

TP3-4121A024MC1743

Safety switch TP with door monitoring contact, escape release

- Auxiliary release on the front
- Escape release from the rear
- With door monitoring contact
- Increased horizontal overtravel



084158

TP3-4121A024MC1787

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel



088206

TP3-4121A024SR11

Safety switch TP, plug connector SR11, with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel
- Plug connector

**084137**

TP3-4121A110M

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel

**084138**

TP3-4121A230M

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel

**084260**

TP3-4121K024M

Safety switch TP with door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- With door monitoring contact
- Increased overtravel for horizontal and vertical approach directions

**088221**

TP3-4121K024SR11

Safety switch TP, plug connector SR11, with door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- With door monitoring contact
- Increased overtravel for horizontal and vertical approach directions
- Plug connector

**084261**

TP3-4121K110M

Safety switch TP with door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- With door monitoring contact
- Increased overtravel for horizontal and vertical approach directions

**084262**

TP3-4121K230M

Safety switch TP with door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- With door monitoring contact
- Increased overtravel for horizontal and vertical approach directions



098403

TP3-4131A024L024M

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel
- With LED function display

**084129**

TP3-4131A024M

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel

**106155**

TP3-4131A024MC1993

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- Escape release from the rear
- With door monitoring contact
- Increased horizontal overtravel

**088204**

TP3-4131A024SR11

Safety switch TP, plug connector SR11, with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel
- Plug connector



084130

TP3-4131A110M

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel



084131

TP3-4131A230M

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel



084256

TP3-4131K024M

Safety switch TP with door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- With door monitoring contact
- Increased overtravel for horizontal and vertical approach directions



088219

TP3-4131K024SR11

Safety switch TP, plug connector SR11, with door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- With door monitoring contact
- Increased overtravel for horizontal and vertical approach directions
- Plug connector



084257

TP3-4131K110M

Safety switch TP with door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- With door monitoring contact
- Increased overtravel for horizontal and vertical approach directions



084258

TP3-4131K230M

Safety switch TP with door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- With door monitoring contact
- Increased overtravel for horizontal and vertical approach directions



137709

TP3-4141A024L024M

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel
- With LED function display



084270

TP3-4141A024M

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel



086165

TP3-4141A024MC1743

Safety switch TP with door monitoring contact, escape release

- Auxiliary release on the front
- Escape release from the rear
- With door monitoring contact
- Increased horizontal overtravel



103339

TP3-4141A024RC18EXT1

Safety switch TP, plug connector RC18, pushbutton and cover for indicators, with door monitoring contact

- Auxiliary release on the front
- Pushbutton and cover for indicators
- With door monitoring contact
- Increased horizontal overtravel
- Plug connector



088256

TP3-4141A024SEM4AS1

Safety switch TP AS1, plug connector M12 (closed-circuit current principle)

- Auxiliary release on the front
- Increased horizontal overtravel
- Optionally without guard lock monitoring

**087377**

TP3-4141A024SM8C1992

Safety switch TP, plug connector M12, with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel
- Plug connector

**088922**

TP3-4141A024SR11

Safety switch TP, plug connector SR11, with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel
- Plug connector

**088264**

TP3-4141A110M

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel



100684

TP3-4141K024M

Safety switch TP with door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- With door monitoring contact
- Increased overtravel for horizontal and vertical approach directions



093460

TP3-537A024L024M

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel
- With LED function display



084336

TP3-537A024M

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel



087434

TP3-537A024SR6

Safety switch TP, plug connector SR6, with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel
- Plug connector



084337

TP3-537A110M

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel



087437

TP3-537A110SR6

Safety switch TP, plug connector SR6, with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel
- Plug connector



084338

TP3-537A230M

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel



087440

TP3-537A230SR6

Safety switch TP, plug connector SR6, with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel
- Plug connector



084347

TP3-537K024M

Safety switch TP with door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- With door monitoring contact
- Increased overtravel for horizontal and vertical approach directions



088213

TP3-537K024SR6

Safety switch TP, plug connector SR6, with door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- With door monitoring contact
- Increased overtravel for horizontal and vertical approach directions
- Plug connector



093635

TP4-2131A024L024M

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel
- With LED function display

**084145**

TP4-2131A024M

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel

**084159**

TP4-2131A024MC1787

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel

**172349**

TP4-2131A024MC1993

Safety switch TP with door monitoring contact, escape release

- Auxiliary release on the front
- Escape release from the rear
- With door monitoring contact
- Increased horizontal overtravel

**088208**

TP4-2131A024SR11

Safety switch TP, plug connector SR11, with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel
- Plug connector

**084147**

TP4-2131A110M

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel

**084148**

TP4-2131A230M

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel

**084266**

TP4-2131K024M

Safety switch TP with door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- With door monitoring contact
- Increased overtravel for horizontal and vertical approach directions



088223

TP4-2131K024SR11

Safety switch TP, plug connector SR11, with door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- With door monitoring contact
- Increased overtravel for horizontal and vertical approach directions
- Plug connector



093637

TP4-4121A024L024M

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel
- With LED function display



084139

TP4-4121A024M

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel

**084160**

TP4-4121A024MC1787

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel

**088209**

TP4-4121A024SR11

Safety switch TP, plug connector SR11, with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel
- Plug connector

**084140**

TP4-4121A110M

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel

**084141**

TP4-4121A230M

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel



084263

TP4-4121K024M

Safety switch TP with door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- With door monitoring contact
- Increased overtravel for horizontal and vertical approach directions



088224

TP4-4121K024SR11

Safety switch TP, plug connector SR11, with door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- With door monitoring contact
- Increased overtravel for horizontal and vertical approach directions
- Plug connector



084380

TP4-4121K110M

Safety switch TP with door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- With door monitoring contact
- Increased overtravel for horizontal and vertical approach directions



170639

TP4-4131A024L024M

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel
- With LED function display



084132

TP4-4131A024M

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel



088207

TP4-4131A024SR11

Safety switch TP, plug connector SR11, with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel
- Plug connector



084133

TP4-4131A110M

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel

**084134**

TP4-4131A230M

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel

**084259**

TP4-4131K024M

Safety switch TP with door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- With door monitoring contact
- Increased overtravel for horizontal and vertical approach directions

**088222**

TP4-4131K024SR11

Safety switch TP, plug connector SR11, with door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- With door monitoring contact
- Increased overtravel for horizontal and vertical approach directions
- Plug connector



084275

TP4-4141A024M

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel



088257

TP4-4141A024SEM4AS1

Safety switch TP AS1, plug connector M12 (open-circuit current principle)

- Auxiliary release on the front
- Increased horizontal overtravel
- Optionally without guard lock monitoring



091676

TP4-4141A024SEM4AS2

TP AS2 safety switch, plug connector(s) M12 (open-circuit current principle)

- Auxiliary release on the front
- Increased horizontal overtravel
- Optionally without guard lock monitoring



087378

TP4-4141A024SM8C1992

Safety switch TP, plug connector M12, with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel
- Plug connector



088923

TP4-4141A024SR11

Safety switch TP, plug connector SR11, with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel
- Plug connector



096296

TP4-4141K024M

Safety switch TP with door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- With door monitoring contact
- Increased overtravel for horizontal and vertical approach directions



088230

TP4-4141K024SR11

Safety switch TP, plug connector SR11, with door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- With door monitoring contact
- Increased overtravel for horizontal and vertical approach directions
- Plug connector



084339

TP4-537A024M

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel



087443

TP4-537A024SR6

Safety switch TP, plug connector SR6, with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel
- Plug connector



084340

TP4-537A110M

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel



087447

TP4-537A110SR6

Safety switch TP, plug connector SR6, with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel



084341

TP4-537A230M

Safety switch TP with door monitoring contact

- Auxiliary release on the front
- With door monitoring contact
- Increased horizontal overtravel



084348

TP4-537K024M

Safety switch TP with door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- With door monitoring contact
- Increased overtravel for horizontal and vertical approach directions



088216

TP4-537K024SR6

Safety switch TP, plug connector SR6, with door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- With door monitoring contact
- Increased overtravel for horizontal and vertical approach directions
- Plug connector



084349

TP4-537K110M

Safety switch TP with door monitoring contact, increased vertical overtravel

- Auxiliary release on the front
- With door monitoring contact
- Increased overtravel for horizontal and vertical approach directions



094902

TP5-4120A024L024SR11

Safety switch TP, plug connector SR11, with door unlock request contact

- Auxiliary shutdown feature on the front
- With door unlock request contact
- Increased horizontal overtravel
- Plug connector
- With LED function display



084279

TP5-4120A024M

Safety switch TP with door unlock request contact

- Auxiliary shutdown feature on the front
- With door unlock request contact
- Increased horizontal overtravel



088241

TP5-4120A230M

Safety switch TP with door unlock request contact

- Auxiliary shutdown feature on the front
- With door unlock request contact
- Increased horizontal overtravel

**084280**

TP6-4120A024M

Safety switch TP with door unlock request contact

- Auxiliary shutdown feature on the front
- With door unlock request contact
- Increased horizontal overtravel

**096204**

TP6-4120A024SR11

Safety switch TP, plug connector SR11, with door unlock request contact

- Auxiliary shutdown feature on the front
- With door unlock request contact
- Increased horizontal overtravel
- Plug connector

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: eai@nt-rt.ru || сайт: <https://euchner.nt-rt.ru/>