

Компактные предохранительные выключатели в пластиковом корпусе, типа NP

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: eai@nt-rt.ru || сайт: <https://euchner.nt-rt.ru/>

SAFETY SWITCH NP



Description

Safety switches series NP permit operation of a plant only when the guard is in the closed position, respectively the actuator is inserted into the switch.

Different mounting fixtures and switching contacts provide the best preconditions for use in all automation, assembly and handling fields.

NP safety switches have reinforced plastic housings. Due to the narrow switch width, they are highly suitable for installation on profiles.

Features

- Degree of protection IP67
- Up to 3 switching contacts
- Different actuators
- 5 approach directions



083680

NP1-618AB-M

Safety switch NP, mounting; assembly in 40 mm grid, cable entry M20 x 1.5

- Mounting with 40 mm spacing
- Cable entry M20 x 1.5
- 1 positively driven, positively driven contact

**083685**

NP1-618AS-M

Safety switch NP, mounting; assembly according to DIN EN 50047, cable entry M20 x 1.5

- Mounting according to DIN EN 50047
- Cable entry M20 x 1.5
- 1 positively driven, positively driven contact

**083686**

NP1-628AB-M

Safety switch NP, mounting; assembly in 40 mm grid, cable entry M20 x 1.5

- Mounting with 40 mm spacing
- Cable entry M20 x 1.5
- 1 positively driven, positively driven contact
- 1 NO contacts

**083688**

NP1-628AS-M

Safety switch NP, mounting; assembly according to DIN EN 50047, cable entry M20 x 1.5

- Mounting according to DIN EN 50047
- Cable entry M20 x 1.5
- 1 positively driven, positively driven contact
- 1 NO contacts



083690

NP1-638AB-M

Safety switch NP, mounting; assembly in 40 mm grid, cable entry M20 x 1.5

- Mounting with 40 mm spacing
- Cable entry M20 x 1.5
- 2 pos. driven contacts

**083691**

NP1-638AS-M

Safety switch NP, mounting; assembly according to DIN EN 50047, cable entry M20 x 1.5

- Mounting according to DIN EN 50047
- Cable entry M20 x 1.5
- 2 pos. driven contacts

**082276**

NP1-648AB-M

Safety switch NP, mounting; assembly in 40 mm grid, cable entry M20 x 1.5

- Mounting with 40 mm spacing
- Cable entry M20 x 1.5
- 2 pos. driven contacts
- 1 NO contacts

**082280**

NP1-648AS-M

Safety switch NP, mounting; assembly according to DIN EN 50047, cable entry M20 x 1.5

- Mounting according to DIN EN 50047
- Cable entry M20 x 1.5
- 2 pos. driven contacts

- 1 NO contacts



059446

NP2-618AB

Safety switch NP, mounting; assembly in 40mm grid, plug connector(s) SR6

- Mounting with 40 mm spacing
- Plug connector(s) SR6, 6-pin PE
- 1 positively driven, positively driven contact



059445

NP2-618AS

Safety switch NP, mounting; assembly to DIN EN 50047, plug connector(s) SR6

- Mounting according to DIN EN 50047
- Plug connector(s) SR6, 6-pin PE
- 1 positively driven, positively driven contact



059448

NP2-628AB

Safety switch NP, mounting; assembly in 40mm grid, plug connector(s) SR6

- Mounting with 40 mm spacing
- Plug connector(s) SR6, 6-pin PE
- 1 positively driven, positively driven contact
- 1 NO contacts



059447

NP2-628AS

Safety switch NP, mounting; assembly to DIN EN 50047, plug connector(s) SR6

- Mounting according to DIN EN 50047
- Plug connector(s) SR6, 6-pin PE
- 1 positively driven, positively driven contact
- 1 NO contacts

**059450**

NP2-638AB

Safety switch NP, mounting; assembly in 40mm grid, plug connector(s) SR6

- Mounting with 40 mm spacing
- Plug connector(s) SR6, 6-pin PE
- 2 pos. driven contacts

**059449**

NP2-638AS

Safety switch NP, mounting; assembly to DIN EN 50047, plug connector(s) SR6

- Mounting according to DIN EN 50047
- Plug connector(s) SR6, 6-pin PE
- 2 pos. driven contacts

**088924**

NP2-648AS

Safety switch NP, mounting; assembly to DIN EN 50047, plug connector(s) SR6

- Mounting according to DIN EN 50047
- Plug connector(s) SR6, 6-pin PE
- 2 pos. driven contacts
- 1 NO contacts



098633

NP3-628AS

Safety switch NP, mounting; assembly to DIN EN 50047, plug connector(s) M12

- Mounting according to DIN EN 50047
- Plug connector(s) M12, 4-pin
- 1 positively driven, positively driven contact
- 1 NO contacts



094509

NP3-638AB

Safety switch NP, mounting; assembly in 40 mm grid, plug connector(s) M12

- Mounting with 40 mm spacing
- Plug connector(s) M12, 4-pin
- 2 pos. driven contacts



084400

NP3-638AS

Safety switch NP, mounting; assembly to DIN EN 50047, plug connector(s) M12

- Mounting according to DIN EN 50047
- Plug connector(s) M12, 4-pin
- 2 pos. driven contacts

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: eai@nt-rt.ru || сайт: <https://euchner.nt-rt.ru/>