

Предохранительные выключатели повышенной прочности, типа NZ.VZ

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04	Иваново (4932)77-34-06	Магнитогорск (3519)55-03-13	Ростов-на-Дону (863)308-18-15	Тольятти (8482)63-91-07
Ангарск (3955)60-70-56	Ижевск (3412)26-03-58	Москва (495)268-04-70	Рязань (4912)46-61-64	Томск (3822)98-41-53
Архангельск (8182)63-90-72	Иркутск (395)279-98-46	Мурманск (8152)59-64-93	Самара (846)206-03-16	Тула (4872)33-79-87
Астрахань (8512)99-46-04	Казань (843)206-01-48	Набережные Челны (8552)20-53-41	Санкт-Петербург (812)309-46-40	Тюмень (3452)66-21-18
Барнаул (3852)73-04-60	Калининград (4012)72-03-81	Нижний Новгород (831)429-08-12	Саратов (845)249-38-78	Ульяновск (8422)24-23-59
Белгород (4722)40-23-64	Калуга (4842)92-23-67	Новокузнецк (3843)20-46-81	Севастополь (8692)22-31-93	Улан-Удэ (3012)59-97-51
Благовещенск (4162)22-76-07	Кемерово (3842)65-04-62	Ноябрьск (3496)41-32-12	Саранск (8342)22-96-24	Уфа (347)229-48-12
Брянск (4832)59-03-52	Киров (8332)68-02-04	Новосибирск (383)227-86-73	Симферополь (3652)67-13-56	Хабаровск (4212)92-98-04
Владивосток (423)249-28-31	Коломна (4966)23-41-49	Омск (3812)21-46-40	Смоленск (4812)29-41-54	Чебоксары (8352)28-53-07
Владикавказ (8672)28-90-48	Кострома (4942)77-07-48	Орел (4862)44-53-42	Сочи (862)225-72-31	Челябинск (351)202-03-61
Владимир (4922)49-43-18	Краснодар (861)203-40-90	Оренбург (3532)37-68-04	Ставрополь (8652)20-65-13	Череповец (8202)49-02-64
Волгоград (844)278-03-48	Красноярск (391)204-63-61	Пенза (8412)22-31-16	Сургут (3462)77-98-35	Чита (3022)38-34-83
Вологда (8172)26-41-59	Курск (4712)77-13-04	Петрозаводск (8142)55-98-37	Сыктывкар (8212)25-95-17	Якутск (4112)23-90-97
Воронеж (473)204-51-73	Курган (3522)50-90-47	Псков (8112)59-10-37	Тамбов (4752)50-40-97	Ярославль (4852)69-52-93
Екатеринбург (343)384-55-89	Липецк (4742)52-20-81	Пермь (342)205-81-47	Тверь (4822)63-31-35	

Россия +7(495)268-04-70	Казахстан +(727)345-47-04	Беларусь +(375)257-127-884	Узбекистан +998(71)205-18-59	Киргизия +996(312)96-26-47
-------------------------	---------------------------	----------------------------	------------------------------	----------------------------

эл.почта: eai@nt-rt.ru || сайт: <https://euchner.nt-rt.ru/>

SAFETY SWITCH NZ.VZ



Description

The type NZ.VZ safety switch has a standardized basic housing according to EN 50 041. The extremely sturdy, die-cast alloy housing in conjunction with the high degree of protection IP67 permits use under extreme ambient conditions.

Features

- Actuating head that can be turned in 90° stages
- Switching elements with 2 or 4 switching contacts
- Available with LED indicator



089486

NZ1VZ-2121E-M

Safety switch NZ.VZ, cable entry M20 x 1.5

- Cable entry M20 x 1.5
- 4 positively driven, positively driven contacts



089914

NZ1VZ-2121E-MC1233

Safety switch NZ.VZ, protective plate, cable entry M20 x 1.5

- Cable entry M20 x 1.5
- 4 positively driven, positively driven contacts
- Protective plate for switch head



082123

NZ1VZ-2131E-M

Safety switch NZ.VZ, cable entry M20 x 1.5

- Cable entry M20 x 1.5
- 3 positively driven, positively driven contact
- 1 NO contact



093660

NZ1VZ-2131E-M-EX

Safety switch NZ.VZ ATEX, cable entry M20 x 1.5

- ATEX version
- Cable entry M20 x 1.5
- 3 positively driven, positively driven contact
- 1 NO contact



093859

NZ1VZ-2131E-MC1233

Safety switch NZ.VZ, protective plate, cable entry M20 x 1.5

- Cable entry M20 x 1.5
- 3 positively driven, positively driven contact
- 1 NO contact
- Protective plate for switch head



082122

NZ1VZ-3131E-M

Safety switch NZ.VZ, cable entry M20 x 1.5

- Cable entry M20 x 1.5
- 2 positively driven, positively driven contacts
- two NO contacts



090671

NZ1VZ-528E-M

Safety switch NZ.VZ, cable entry M20 x 1.5

- Cable entry M20 x 1.5
- 1 positively driven, positively driven contact
- 1 NO contact



082137

NZ1VZ-528E-MC1233

Safety switch NZ.VZ, protective plate, cable entry M20 x 1.5

- Cable entry M20 x 1.5
- 1 positively driven, positively driven contact
- 1 NO contact
- Protective plate for switch head



090566

NZ1VZ-528EL060-M

Safety switch NZ.VZ, cable entry M20 x 1.5

- Cable entry M20 x 1.5
- 1 positively driven, positively driven contact
- 1 NO contact
- LED indicator



089480

NZ1VZ-528EL110-M

Safety switch NZ.VZ, cable entry M20 x 1.5

- Cable entry M20 x 1.5
- 1 positively driven, positively driven contact
- 1 NO contact
- LED indicator



082121

NZ1VZ-528EL220-M

Safety switch NZ.VZ, cable entry M20 x 1.5

- Cable entry M20 x 1.5
- 1 positively driven, positively driven contact
- 1 NO contact
- LED indicator



085676

NZ1VZ-538E-M

Safety switch NZ.VZ, cable entry M20 x 1.5

- Cable entry M20 x 1.5
- 2 pos. driven contacts

**093858**

NZ1VZ-538E-MC1233

Safety switch NZ.VZ, protective plate, cable entry M20 x 1.5

- Cable entry M20 x 1.5
- 2 pos. driven contacts
- Protective plate for switch head

**082119**

NZ1VZ-538EL060-M

Safety switch NZ.VZ, cable entry M20 x 1.5

- Cable entry M20 x 1.5
- 2 pos. driven contacts
- LED indicator

**089481**

NZ1VZ-538EL110-M

Safety switch NZ.VZ, cable entry M20 x 1.5

- Cable entry M20 x 1.5
- 2 pos. driven contacts
- LED indicator



089482

NZ1VZ-538EL220-M

Safety switch NZ.VZ, cable entry M20 x 1.5

- Cable entry M20 x 1.5
- 2 pos. driven contacts
- LED indicator



088852

NZ2VZ-2121E

Safety switch NZ.VZ, plug connector SR11

- Plug connector(s) SR11, 11-pole PE
- 4 positively driven, positively driven contacts



090144

NZ2VZ-2131E

Safety switch NZ.VZ, plug connector SR11

- Plug connector(s) SR11, 11-pole PE
- 3 pos. driven contacts
- 1 NO contact



095896

NZ2VZ-2131E-10C-FW

Safety switch NZ.VZ, plug connector MR10

- Plug connector(s) MR10, 9-pin PE
- 3 pos. driven contacts

- 1 NO contact



092355

NZ2VZ-2131E-8C-GMMF

Safety switch NZ.VZ, plug connector MR8

- Plug connector(s) MR8, 7-pin PE
- 3 positively driven, positively driven contact
- 1 NO contact



098445

NZ2VZ-2131E-9C-DCX

Safety switch NZ.VZ, plug connector MR9

- Plug connector(s) MR9, 8-pin PE
- 2 positively driven, positively driven contacts
- 1 NO contact



077363

NZ2VZ-2131E-9C-GMMF

Safety switch NZ.VZ, plug connector MR9

- Plug connector(s) MR9, 8-pin PE
- 3 positively driven, positively driven contact
- 1 NO contact



093857

NZ2VZ-2131EC1233

Safety switch NZ.VZ with protective plate, plug connector SR11

- Plug connector(s) SR11, 11-pole PE
- 3 positively driven, positively driven contact
- 1 NO contacts
- Protective plate for switch head



090145

NZ2VZ-3131E

Safety switch NZ.VZ, plug connector SR11

- Plug connector(s) SR11, 11-pole PE
- 2 pos. driven contacts
- 2 NO contacts



084885

NZ2VZ-528E

Safety switch NZ.VZ, plug connector SR6

- Plug connector(s) SR6, 6-pin PE
- 1 positively driven, positively driven contact
- 1 NO contacts



045801

NZ2VZ-528EL060

Safety switch NZ.VZ, plug connector SR6

- Plug connector(s) SR6, 6-pin PE
- 1 positively driven, positively driven contact
- 1 NO contacts
- LED indicator



090143

NZ2VZ-538E

Safety switch NZ.VZ, plug connector SR6

- Plug connector(s) SR6, 6-pin PE
- 2 pos. driven contacts



077229

NZ2VZ-538EC1233

Safety switch NZ.VZ, protective plate, plug connector SR6

- Plug connector(s) SR6, 6-pin PE
- 2 pos. driven contacts
- Protective plate for switch head



043296

NZ2VZ-538EC1420

Safety switch NZ.VZ, plug connector C16-1

- Plug connector(s) C16-1, 6-pin PE
- 2 pos. driven contacts
- Protective plate for switch head



071200

NZ2VZ-538EC1701

Safety switch NZ.VZ, plug connector C16-1

- Plug connector(s) C16-1, 6-pin PE
- 2 pos. driven contacts

- Protective plate for switch head



052108

NZ2VZ-538EL060

Safety switch NZ.VZ, plug connector SR6

- Plug connector(s) SR6, 6-pin PE
- 2 pos. driven contacts
- LED indicator



090742

NZ2VZ-538ESEM4AS1

Safety switch NZ.VZ ASi, plug connector(s) M12

- Plug connector(s) M12, 4-pin
- 2 pos. driven contacts
- LED indicator



084905

NZ2VZ-538ESVM5

Safety switch NZ.VZ, plug connector(s) M12

- Plug connector(s) M12, 4-pin PE
- 2 pos. driven contacts



111834

NZ2VZ-538ESVM5C2334

Safety switch NZ.VZ, plug connector(s) M12

- Plug connector(s) M12, 5-pin without PE
- 2 pos. driven contacts

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: eai@nt-rt.ru || сайт: <https://euchner.nt-rt.ru/>