

Кнопки аварийной остановки, типа ES

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04


Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: eai@nt-rt.ru || сайт: <https://euchner.nt-rt.ru/>

EMERGENCY STOP ES...

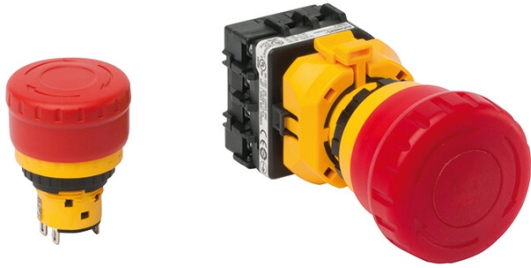

As per EN ISO 13850 the emergency stop function is a function that is intended to avert an impending hazard for personnel, damage to the machine or work in progress, or to alleviate existing hazards, and that is to be triggered by a single user action.

For this purpose controlgear is required that is equipped with a red actuator, that is the mushroom-head button in red; the button is to have a yellow background. The emergency stop function is generally only allowed to provide safety in addition to the directly acting safety functions. Directly acting safety functions are, for example, safety switches on safety doors that cause a hazard to be shut down without conscious action by the user.



105017

ES-FB1W-XW1E-BV412MFR-YO

Emergency stop ES-FB..-XW, devices with housing

Button head, red, 40 mm ø

Contact block monitoring

Reset by pulling or turning

Housing



105018

ES-FB1W-XW1E-LV412Q4MFR-YO

Emergency stop ES-FB..-XW, devices with housing

Button head, red, 40 mm ø

Contact block monitoring

Reset by pulling or turning

Housing

illuminated

**162943**

ES-FB1W-XW1E-LV412Q4MFR-YO-1C2514

Emergency stop ES-FB..-XW devices with housing, M12, 5-pin.

- Button head, red, 40 mm ø
- Contact block monitoring
- Connection via plug connector M12, 5-pin
- Reset by pulling or turning
- Housing
- illuminated

**169351**

ES-FB1W-XW1E-LV412Q4MFR-YO-1C2530

Emergency stop ES-FB..-XW devices with housing, M12, 5-pin.

- Button head, red, 40 mm ø
- Contact block monitoring
- Connection via plug connector M12, 5-pin
- Reset by pulling or turning
- Housing
- illuminated

**106435**

ES-XA1E-BV3U02R

Emergency stop ES-XA, built-in devices, 16 mm

- Reset by pulling or turning
- Bottom of housing yellow
- Button head, red, ø 29 mm

**105015**

ES-XN4E-BL412MFRH

Emergency stop ES-XN, built-in devices, 30 mm

- Button head, red, 44 mm ø
- Contact block monitoring
- Can be locked using padlock
- Reset by turning

**105016**

ES-XN4E-LL412Q4MFR

Emergency stop ES-XN, built-in devices, 30 mm

- Button head, red, 44 mm ø
- Contact block monitoring
- Can be locked using padlock
- Reset by turning
- illuminated

**124712**

ES-XN4E-LL413Q4MFR

Emergency stop ES-XN, built-in devices, 30 mm

- Button head, red, 44 mm ø
- Contact block monitoring
- Can be locked using padlock
- Reset by turning
- illuminated



155919

ES-XN4E-LL422Q4MFR

Emergency stop ES-XN, built-in devices, 30 mm

- Button head, red, 44 mm ø
- Contact block monitoring
- Can be locked using padlock
- Reset by turning
- illuminated



113893

ES-XW1E-BV404MFR

Emergency stop ES-XW, built-in devices, 22 mm

- Button head, red, 40 mm ø
- Contact block monitoring
- Reset by pulling or turning



105013

ES-XW1E-BV412MFR

Emergency stop ES-XW, built-in devices, 22 mm

- Button head, red, 40 mm ø
- Contact block monitoring
- Reset by pulling or turning



114354

ES-XW1E-LV404Q4MFR

Emergency stop ES-XW, built-in devices, 22 mm

- Button head, red, 40 mm ø
- Contact block monitoring
- Reset by pulling or turning
- illuminated

**105014**

ES-XW1E-LV412Q4MFR

Emergency stop ES-XW, built-in devices, 22 mm

- Button head, red, 40 mm ø
- Contact block monitoring
- Reset by pulling or turning
- illuminated

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: eai@nt-rt.ru || сайт: <https://euchner.nt-rt.ru/>